



Motor Kits Troubleshooting Guide

NOTE TO ANDROID USERS:

When pairing to your “Louvered-X-Android” device in your phone’s Bluetooth settings, users should only be paired to one “Louvered-X-Android” device at a time.

IS THE RED LIGHT ON THE MOTOR CONTROLLER CONSTANTLY BLINKING?

If so, this means that when you operate the attached motors, they are exceeding the current limit of 10 Amps. Standard 12V linear actuator motors should not drain that much current, therefore, check the placement of your motors to ensure they can move freely or check to see if you have installed a defective motor.